 



# INSTRUCTIONS FOR USE OF WASHING MACHINE/ DRYER CANDY - CBWD 8514D

The following functions are available on your appliance:

- A. Wash only: see page 2
- B. Wash + dry: see page 3
- C. Drying only: see page 4

## CONTRÔL PANEL

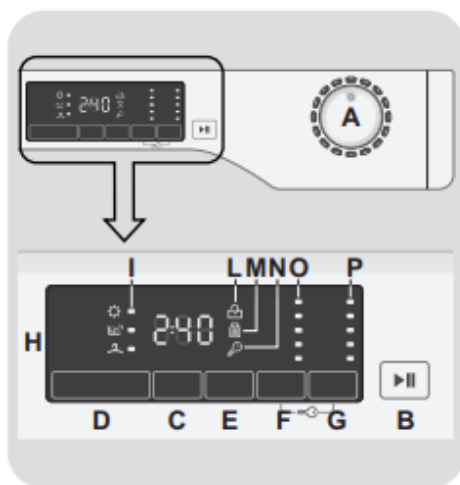

 
1. Put your laundry and the detergent capsule directly into the machine
2. Close the door of the machine
3. Select a programme and choose the desired cycle using button A
4. Press button B  to start the programme.

## A. WASH ONLY

- Select the desired programme with the PROGRAMME BUTTON (A), for example, Cotton [Coton] 🐾



- Adjust the temperature by pressing the temperature selection button (F)

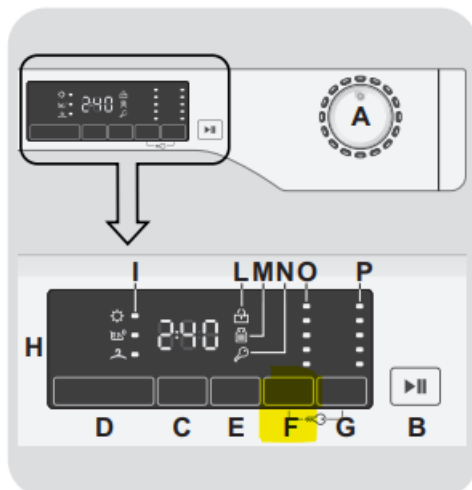


- Switch on by pressing button B ▶||
- At the end of the cycle the word 'End' appears on the screen. After 5 minutes, the appliance goes into standby mode and the door can be opened. Open the door and take out the laundry. Turn button A to OFF to turn off the machine.

## **B. WASH + DRY**

 - Using the PROGRAMME BUTTON (button A), select the desired programme, for example, Cotton [Coton] 🧶



- Choose the desired temperature by pressing button F to select your choice

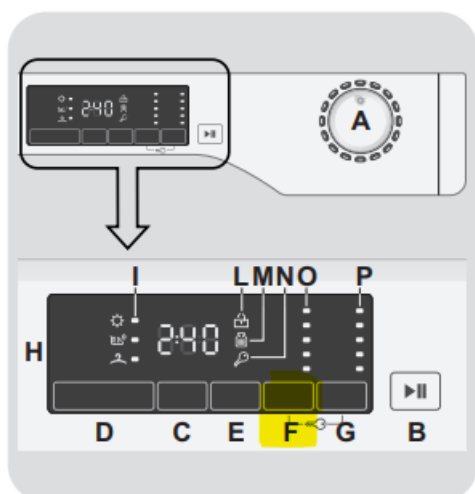

- Select the desired degree of drying (Key 1)


The following drying levels are available:

- READY TO STORE [PRÊT A RANGER] ☀️: the laundry is completely dry and ready to be stored in the wardrobe without being ironed;
- READY TO HANG [PRÊT SUR CINTRE] 🧶: the laundry is slightly damp so that it does not crease. Clothes should be hung up to finish drying;
- READY TO IRON [PRÊT A REPASSER] 🧺: the clothes are left damp enough to facilitate ironing.


- Switch on by pressing the Start/Pause [Start/Pause] button (B) ▶️||
- At the end of the cycle the word 'End' appears on the screen. After 5 minutes, the appliance switches to standby mode and the door can be opened. Open the door and take out the laundry. Turn button A to OFF to switch off the machine.

### C. DRYING ONLY

 - Using the PROGRAMME BUTTON (A) choose the desired programme, such as Drying cotton [Coton] 🗑️⚙️⚙️

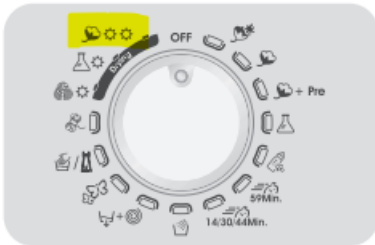

 - Choose the desired degree of drying (Key 1)

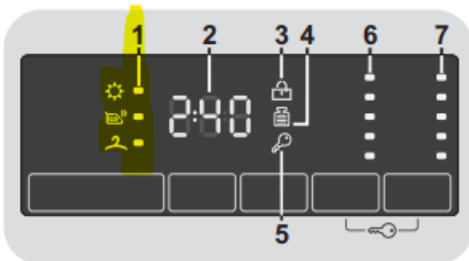

The following drying levels are available:

- READY TO STORE [PRÊT A RANGER] ⚙️: the laundry is completely dry and ready to be stored in the wardrobe without being ironed;
  - READY TO HANG [PRÊT SUR CINTRE] 🧑: the laundry is slightly damp so that it does not crease. Clothes should be hung up to finish drying;
  - READY TO IRON [PRÊT A REPASSER] 🗑️: the clothes are left damp enough to facilitate ironing.
- Press the Stop/pause [Départ/pause] button (B) ▶️ to start the programme.
  - At the end of the cycle the word 'End' appears on the screen. After 5 minutes the appliance switches to standby mode and the door can be opened. Open the door and remove the laundry. Turn button A to OFF to switch off the machine.