 


INSTRUCTIONS FOR USE WASHING/DRYING MACHINE WHIRLPOOL BIWDWG75148EU

The following functions are available on your appliance:

- A. Wash only: see page 2
- B. Wash + dry: see page 3
- C. Dry only: see page 4

CONTROL PANEL

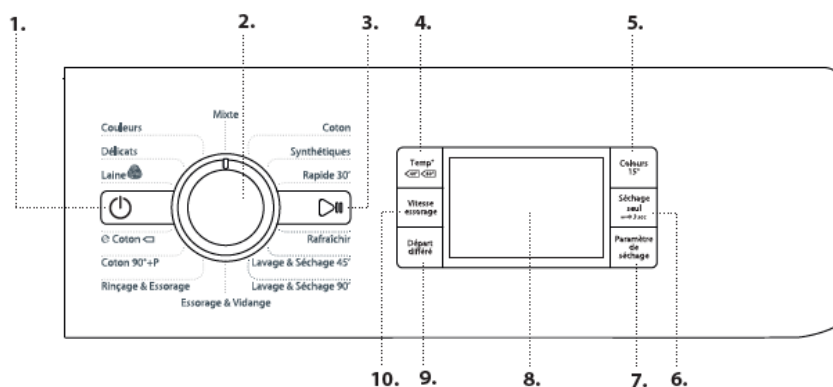


- 1. Touche Marche/Arrêt
- 2. Sélecteur de programme
- 3. Touche Marche / Pause
- 4. Touche de réglage de la température
- 5. Touche Colours 15°
- 6. Touche Séchage seul/ Verrouillage des touches
- 7. Touche Paramètre de séchage
- 8. Écran
- 9. Touche Départ différé
- 10. Touche Vitesse essorage

Couleurs = Coloureds
 Délicats = Delicate fabrics
 Laine = Wool
 e Coton = Cotton economical wash
 Coton 90° +P = Cotton 90°
 Rinçage & Essorage = Rinse and spin
 Essorage & Vidange = Spin and empty



Coton = Cotton
 Synthétiques = Synthetic fabrics
 Rapid 30' = Quick 30 minute wash
 Rafraîchir = Freshen up
 Lavage & Séchage 45' = Wash and dry 45 min
 Lavage & Séchage 90' = Wash and dry 90 min

 
- 1. Touche Marche/Arrêt = Start/Stop button
- 2. Sélecteur de programme = Programme selection button
- 3. Touche Marche/Pause = Start/Pause button
- 4. Touche de réglage de température = Temperature setting button
- 5. Touche Colours 15° = Coloureds 15°


- 6. Touche Séchage seul/Verrouillage des touches = Dry only/key lock
- 7. Touche Paramètre de séchage = Drying parameter button
- 8. Écran = Screen
- 9. Touche Départ différé = Delayed start button
- 10. Touche Vitesse essorage = Spin speed button

1. To start the machine press .
2. Put your laundry and the detergent capsule directly into the machine.
3. Close the door of the machine.
4. Choose the desired programme and select your choice of cycle.



A. WASH ONLY

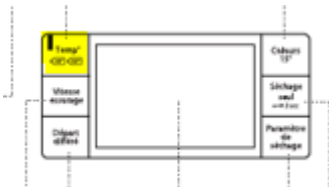- Use the Programme selection button (2) to choose the type of wash, for example, cotton [coton] or mixed fabrics [mixte]  
- Choose the temperature for the wash using button 4

 


- Press the Start/Pause [Marche/Pause] button  The corresponding light comes on, the door locks and the symbol door open goes out.
- At the end of the cycle the word **END** appears on the screen. The door can only be opened once the symbol is lit. Make sure that the symbol door open is lit, open the door and remove the laundry.

 
B. WASH + DRY

- Use the Programme selection button (2) to choose the desired type of wash, for example, cotton [coton] or mixed fabrics [mixte]  

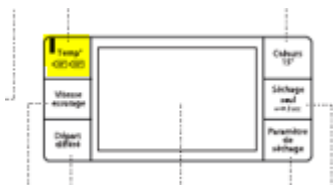

 

- Select the desired temperature using button 4



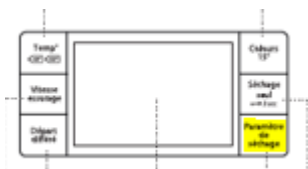

- Select the desired drying time using button 7



 
The following drying levels are available:

- Wardrobe [Garde-robe] : the laundry is completely dry and ready to be put away in the wardrobe without being ironed;
 - On hanger [Cintre] : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to dry completely before being out away;
 - Ironing [Repassage] : the clothes are left damp enough to facilitate ironing.
- Press the Start/Pause [Marche/Pause] button (3)  The corresponding light appears, the door locks and the symbol door open goes out.
 - At the end of the cycle the word **END** appears on the screen. The door can only be opened once the symbol is lit. Make sure the door open symbol is lit then open the door and remove the laundry.

 
C. DRY ONLY

- Press the Programme selection button (2) to choose the desired drying programme, for example, cotton [coton] or mixed fabrics [mixte] :  



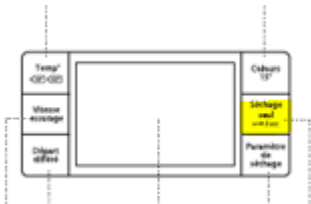

- Press button 6 to choose dry only [Séchage seul]

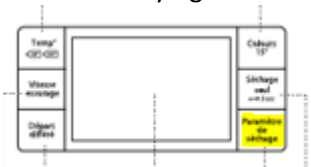

- Select the drying time using the Drying parameter button (7) [Paramètre de séchage]



The following drying levels are available :

- Wardrobe [Garde-robe]  : the laundry is completely dry and ready to be put away in the wardrobe without being ironed;
 - On hanger [Cintre]  : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to dry completely before being out away;
 - Ironing [Repassage]  : the clothes are left damp enough to facilitate ironing.
- Press button 3 Start/Pause [MARCHE/PAUSE] :  The corresponding light lights up, the door locks and the symbol door open goes out.
 - At the end of the cycle the word **END** appears on the screen. The door can only be opened when the symbol is lit. Make sure the symbol door open is lit, open the door and remove the laundry.