 


# INSTRUCTIONS FOR USE WASHING/DRYING MACHINE ELECTROLUX EW7W3816BI

The following functions are available on your appliance:

- A. Wash only: see page 2
- B. Wash + dry: see page 3
- C. Dry only: see page 4

## CONTROL PANEL

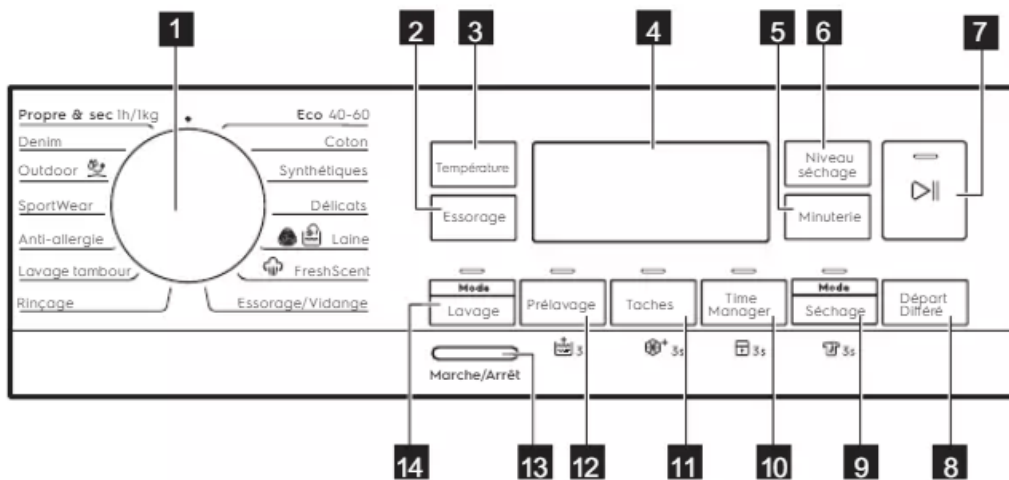

Propre & sec 1h/1kg = Wash & dry 1 hour/1 kg  
 Denim = **Denim**  
 Outdoor = **Sportswear**  
 Anti-allergie = **Anti-allergic**  
 Lavage tambour = **Washing drum**  
 Rinçage = **Rinse**  
 Eco 40-60 = **Economic 40°-60°**

 
Coton = **Cotton**  
 Synthétiques = **Synthetics**  
 Délicats = **Gentle cycle**  
 Laine = **Wool**  
 FreshScent = **Add freshener**  
 Essorage/Vidange = **Spin/Drain**

- 2. Essorage = **Spin**
- 3. Température = **Temperature**
- 5. Minuterie = **Timer**
- 6. Niveau séchage = **Drying level**
- 8. Départ différé = **Delayed start**
- 9. Séchage = **Drying**
- 10. Time manager
- 11. Taches = **Stains**
- 12. Prélavage = **Prewash**
- 13. Marche/Arrêt = **Start/Stop**
- 14. Lavage = **Wash**


1. To start the machine press button 13 Start/Stop [Marche /Arrêt].
2. Put your laundry and the detergent capsule directly into the machine.
3. Close the door of the machine.
4. Choose the desired programme and cycle.



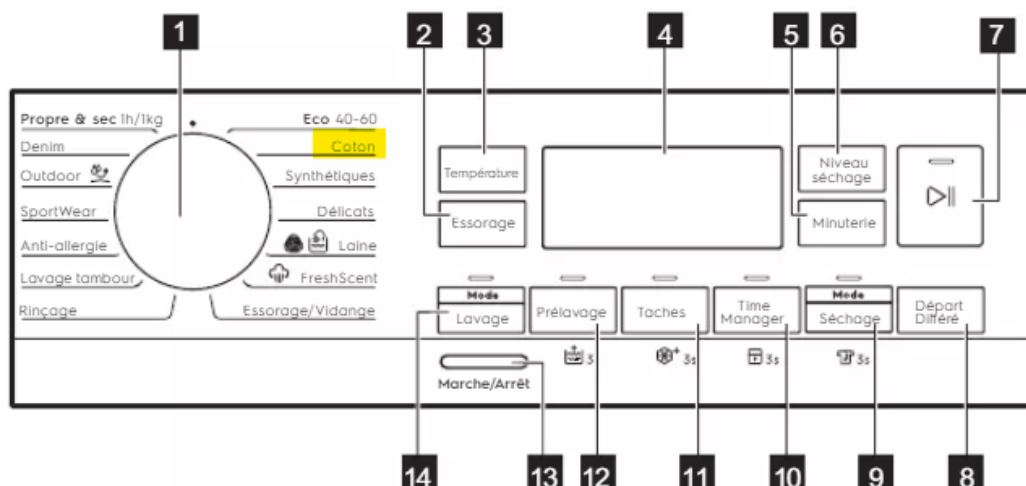

## A. WASH ONLY

 - Press button 1 to choose the desired type of wash, for example, cotton [coton]

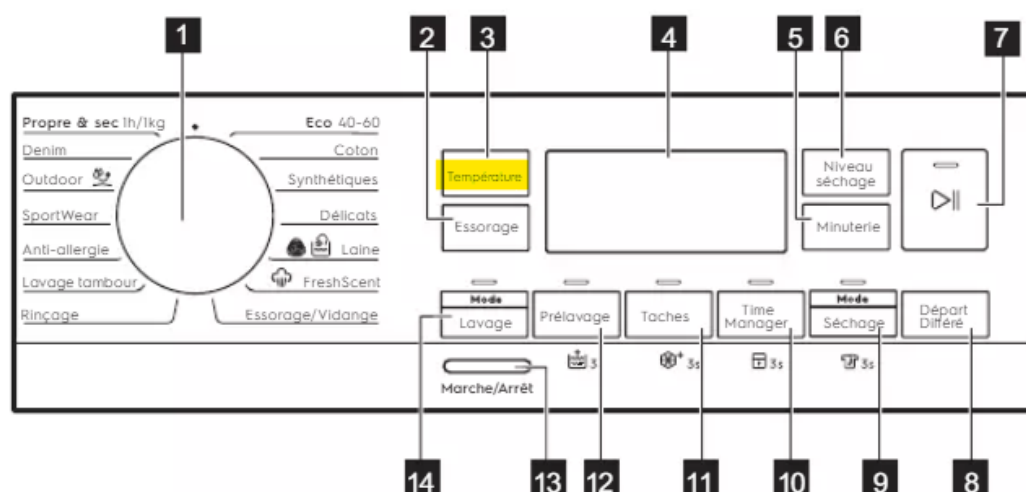


- Using button 3 choose the desired temperature



- Press button 7 START/PAUSE [DEPART/PAUSE] 
- The corresponding light starts flashing, the door locks and the light 'Door locked' shows 
- At the end of the cycle the symbol  shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light  goes out. Open the door and remove the laundry.

## B. WASH & DRY

 - Using button 1 choose the type of wash, for example, cotton [coton]
- Choose the desired temperature for the wash by using button 3
- Press button 9 Drying [Séchage]

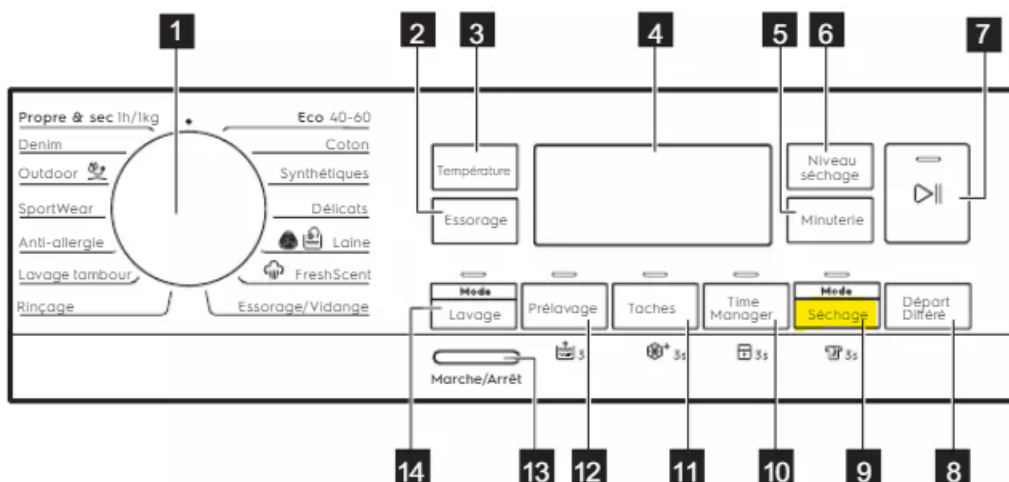

- Select the desired drying level using button 6.

The following drying levels are available:


- o Completely dry [Très sec] ☀️ : the laundry is completely dry and can be put away in the wardrobe without being ironed;
- o Ready to hang [Prêt à ranger] 🌞 : the laundry is slightly damp so that it doesn't crease. Clothes should be put hung up to finish drying ;
- o Ready to iron [Prêt à repasser] 🌤️ : clothes are damp enough to facilitate ironing.

- Press button 7 :▶️⏸️ The corresponding light lights up, 🔒 lights up the door locks and the door locked.

- At the end of the cycle the signal 0:00 shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light 🔒 goes out. Open the door and remove the laundry.

### C. DRY ONLY

 - Press button 9 Drying [Séchage]
- Deactivate the washing action using button 14 Wash [Lavage] on the control panel

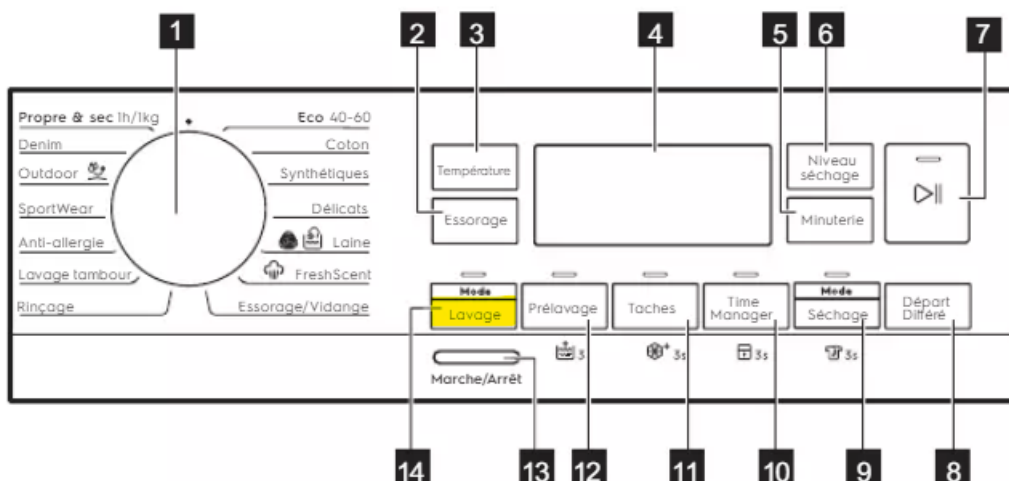

- Choose the desired drying level using button 6

The following drying levels are available:

- Completely dry [Très sec] ☀️ : the laundry is completely dry and can be put away in the wardrobe without being ironed;
- Ready to hang [Prêt à ranger] ☀️ : the laundry is slightly damp so that it doesn't crease. Clothes should be put hung up to finish drying ;
- Ready to iron [Prêt à repasser] ☀️ : clothes are damp enough to facilitate ironing.

- Press button 7. ▶|| The door will lock, the light will start flashing and the light Door locked [Hublot verrouillé] 🔑 shows.

- At the end of the cycle 000 shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light 🔑 goes out. Open the door and remove the laundry.