 


INSTRUCTIONS FOR USE WASHING/DRYING MACHINE ELECTROLUX EW7W3816BI

The following functions are available on your appliance:

- A. Wash only: see page 2
- B. Wash + dry: see page 3
- C. Dry only: see page 4

CONTROL PANEL

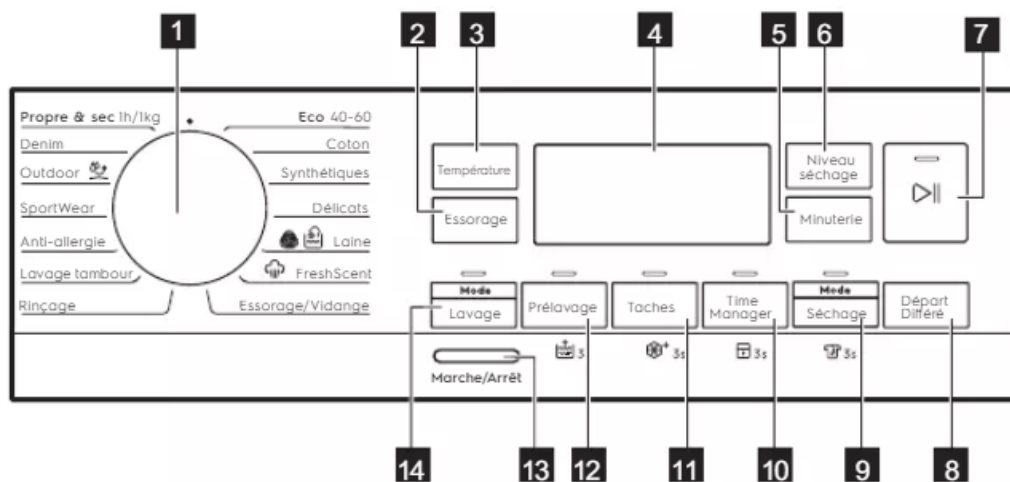

Propre & sec 1h/1kg = Wash & dry 1 hour/1 kg
 Denim = Denim
 Outdoor = Sportswear
 Anti-allergie = Anti-allergic
 Lavage tambour = Washing drum
 Rinçage = Rinse
 Eco 40-60 = Economic 40°-60°

 
Coton = Cotton
 Synthétiques = Synthetics
 Déliçats = Gentle cycle
 Laine = Wool
 FreshScent = Add freshener
 Essorage/Vidange = Spin/Drain

- 2. Essorage = Spin
- 3. Température = Temperature
- 5. Minuterie = Timer
- 6. Niveau séchage = Drying level
- 8. Départ différé = Delayed start
- 9. Séchage = Drying
- 10. Time manager
- 11. Taches = Stains
- 12. Prélavage = Prewash
- 13. Marche/Arrêt = Start/Stop
- 14. Lavage = Wash


1. To start the machine press button 13 Start/Stop [Marche /Arrêt].
2. Put your laundry and the detergent capsule directly into the machine.
3. Close the door of the machine.
4. Choose the desired programme and cycle.

A. WASH ONLY

- Press button 1 to choose the desired type of wash, for example, cotton [coton]

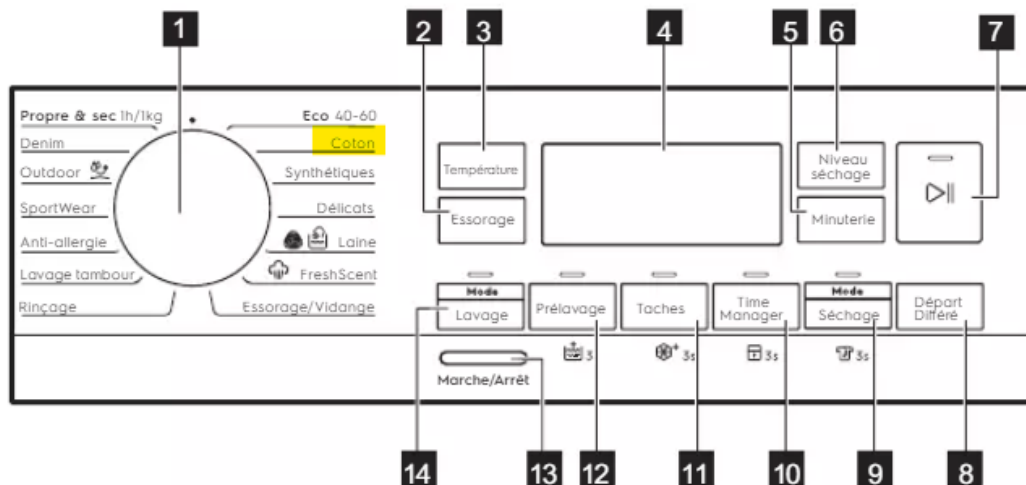

 
- Using button 3 choose the desired temperature

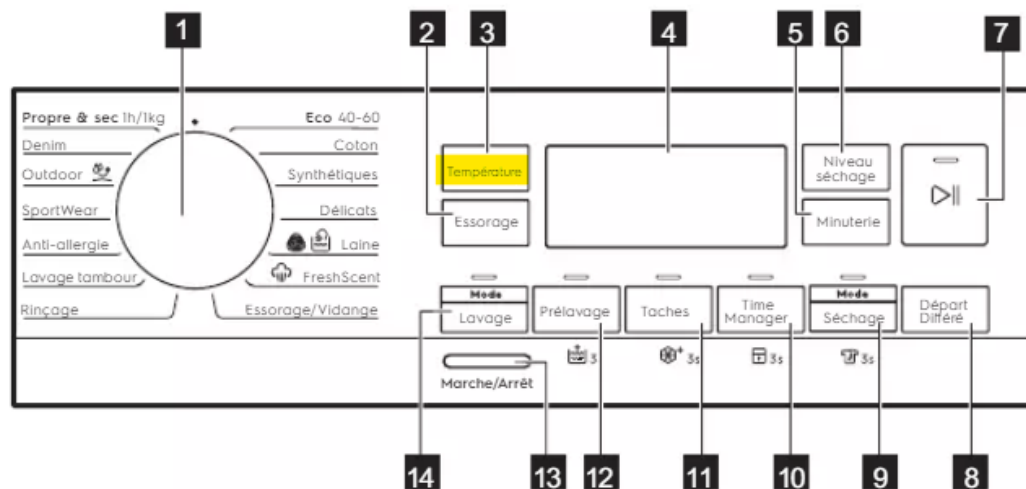

- Press button 7 START/PAUSE [DEPART/PAUSE]  The corresponding light starts flashing, the door locks and the light 'Door locked' shows 
- At the end of the cycle the symbol  shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light  goes out. Open the door and remove the laundry.

B. WASH & DRY

 - Using button 1 choose the type of wash, for example, cotton [coton]
- Choose the desired temperature for the wash by using button 3
- Press button 9 Drying [Séchage]

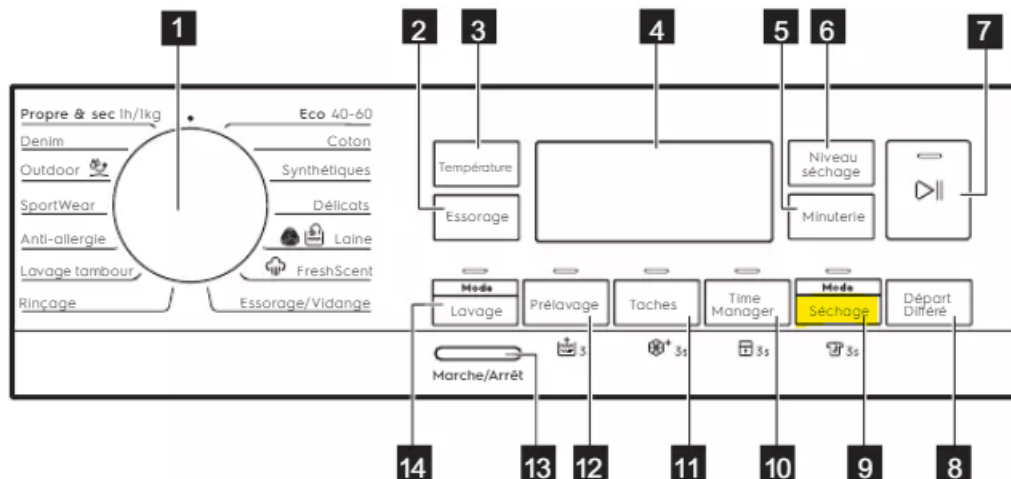


- Select the desired drying level using button 6.

The following drying levels are available:

- Completely dry [Très sec] : the laundry is completely dry and can be put away in the wardrobe without being ironed;
 - Ready to hang [Prêt à ranger] : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying;
 - Ready to iron [Prêt à repasser] : clothes are left damp enough to facilitate ironing.
- Press button 7 The corresponding light starts flashing, the door locks and the door locked sign shows.
- At the end of the cycle the signal shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light goes out. Open the door and remove the laundry.

C. DRY ONLY

 - Press button 9 Drying [Séchage]
- Deactivate the washing action using button 14 Wash [Lavage] on the control panel

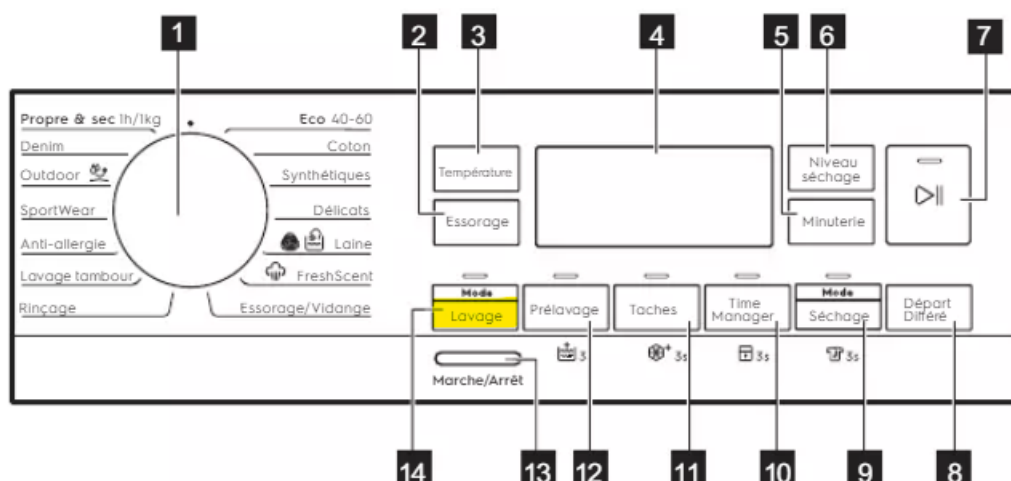

- Choose the desired drying level using button 6

The following drying levels are available:

- Completely dry [Très sec] : the laundry is completely dry and can be put away in the wardrobe without being ironed;
 - Ready to hang [Prêt à ranger] : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying;
 - Ready to iron [Prêt à repasser] : clothes are left damp enough to facilitate ironing.
- Press button 7: . The door will lock, the corresponding light will start flashing and the light Door locked [Hublot verrouillé] shows.
- At the end of the cycle shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light goes out. Open the door and remove the laundry.