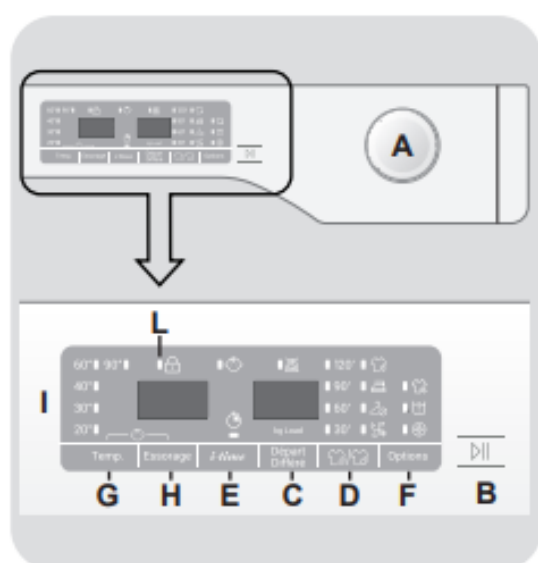 



# INSTRUCTIONS FOR USE OF WASHING/DRYING MACHINE HAIER HWD90B416FWB-FR

The following functions are available on your appliance:

- A. Wash only: see page 2
- B. Wash + dry: see page 3
- C. Drying only: see page 4

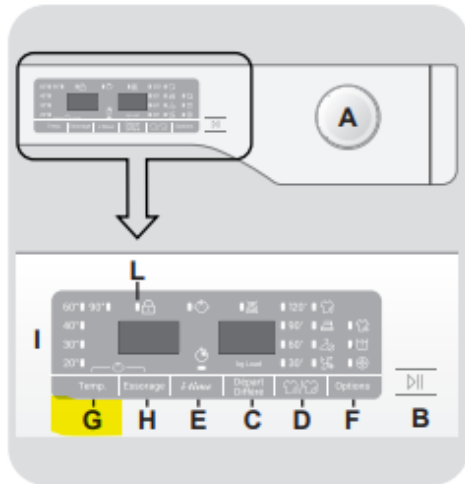 
## CONTROL PANEL





1. Put your laundry and the detergent capsule directly into the machine
2. Close the door of the machine
3. Select a programme and choose the desired cycle using button A
4. Press button B  to start the programme.

## A. WASH ONLY

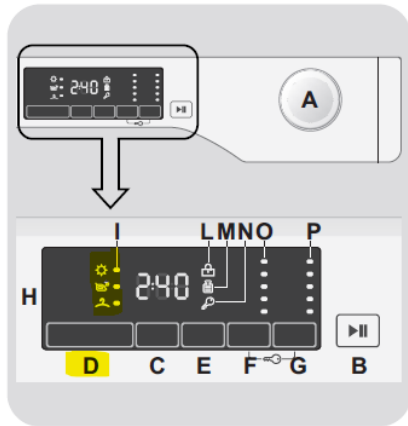 
- Using button A select the desired programme, for example, Cotton [Coton]
- Using button G choose the desired temperature








- Start the programme by pressing button B  (Start/pause [Départ/pause])
- At the end of the cycle the word End appears on the screen and the indication of the locked door (L)  goes out. Open the door and remove the laundry. Turn the Programme selection button (A) to OFF to switch off the machine.

## B. WASH + DRY


- Using button A select the desired programme, for example cotton [Coton]
- Choose the desired temperature using button G
- Select the desired degree of drying using button D

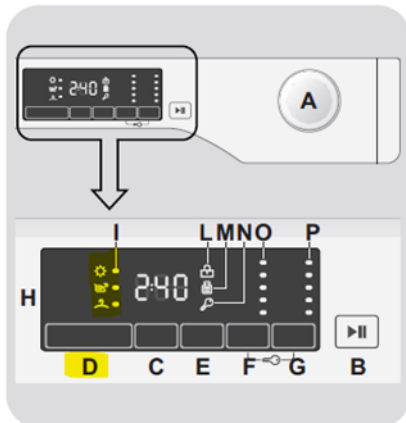 


The following drying levels are available:






- EXTRA DRY [EXTRA SEC]  : the laundry is completely dry and ready to be stored in the wardrobe without being ironed;
  - READY TO HANG [PRÊT A RANGER]  : the laundry is slightly damp so that it does not crease. Clothes should be hung up to finish drying;
  - READY TO IRON [PRÊT A REPASSER]  : the clothes are left damp enough to facilitate ironing.
- Start the programme by pressing button B  (Start/Pause [Départ/ Pause])
  - At the end of the cycle the word End appears on the screen and the indication of locked door (L)  goes out. Open the door and remove the laundry. Turn the programme selection button (A) to OFF to switch off the machine.

### C. DRYING ONLY

- Using the programme selection button (A) choose the desired programme, for example Drying cotton [Séchage Coton] 
- Using button G choose the desired temperature for drying
- Select the desired degree for drying using button D



The following drying levels are available:

- EXTRA DRY [EXTRA SEC] : the laundry is completely dry and ready to be stored in the wardrobe without being ironed;
  - READY TO HANG [PRÊT A RANGER] : the laundry is slightly damp so that it does not crease. Clothes should be hung up to finish drying;
  - READY TO IRON [PRÊT A REPASSER] : the clothes are left damp enough to facilitate ironing.
- Start the programme using button B (Start/pause [Départ/ Pause] 
  - At the end of the cycle the word End appears on the screen and the indication of locked door (L)  goes out. Open the door and remove the laundry. Turn the Programme selection button (A) to OFF to switch off the machine.