


INSTRUCTIONS FOR USE

IKEA ANRÄTTA 104 117 65 OVEN

The following functions are available:

- A. Oven: see page 2
- B. Microwave: see page 2

CONTROL PANEL

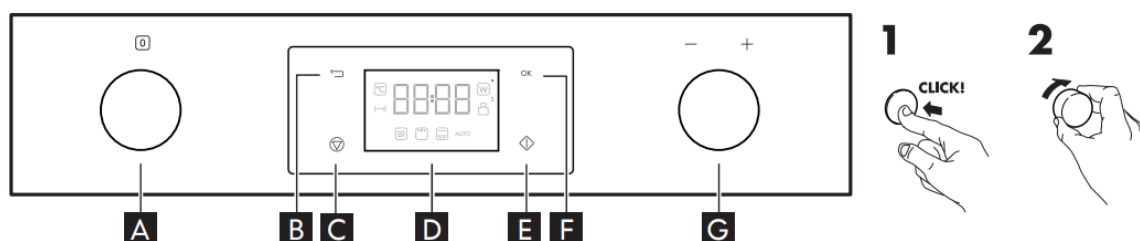

- A** Sélection bouton de réglage « push-push »
- B** Touche Retour
- C** Arrêt
- D** Affichage
- E** Début

- F** Touche de confirmation
- G** Bouton de réglage à poussoir à enclenchement (« push-push »)

Boutons escamotables

Pour utiliser ce type de bouton,

appuyez au centre du bouton. Le bouton sort. Tournez-le sur la position souhaitée. En fin de cuisson, placez le bouton sur [0] et appuyez au centre pour le remettre dans sa position initiale.


- A Push-push selection adjustment button**
 - B Return/go back button**
 - C Stop**
 - D Display**
 - E Start**
 - F Confirmation button**
 - G Push-in adjustment button (push-push)**
- Retractable buttons**

To use this type of button press the centre of the button which will then be released/come out. Turn it to the desired position. At the end of the cooking process turn the button to [0] and press in the centre to put it back to its initial position.

1. Open the oven and put the food/drink on the rotating plate.
2. Close the door.
3. Select a programme.
4. Start the oven by pressing button E (Start) [Début].

A. OVEN FUNCTION

- Press button A to release it then turn it to display the Combi function:

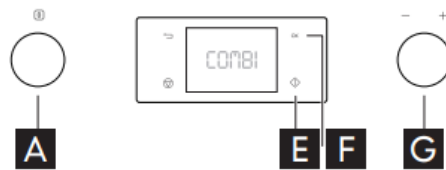

- Press button F to confirm your selection.
- Press button G to release it and turn it to set the cooking time.
- Press button E to start.

B. MICROWAVE FUNCTION

- Press button A to release it then turn it to display microwave



- Press button G to release it then turn it to set the desired power.
- Press button E to start the microwave. Press it again to increase the time in 30 second increments.