

INSTRUCTIONS FOR USE WASHING/DRYING MACHINE

INDESIT BIWDIL861484EU

The following functions are available:

- A. Wash only: see page 2
- B. Wash + dry: see page 3
- C. Dry only: see page 4

CONTROL PANEL

- 1. Touche ON/OFF
- 2. Touche et voyant MARCHÉ/PAUSE
- 3. Voyants AVANCEMENT DU CYCLE
- 4. Voyant HUBLOT VERROUILLÉ
- 5. Touches et voyants OPTION
- 6. Touche et voyant SÉCHAGE SEULEMENT
- 7. Touche SÉCHAGE PAR NIVEAUX
- 8. Touche SÉCHAGE TEMPORISÉ
- 9. Touche TEMPÉRATURE
- 10. BOUTON PROGRAMMES
- 11. Touche PUSH & GO

 



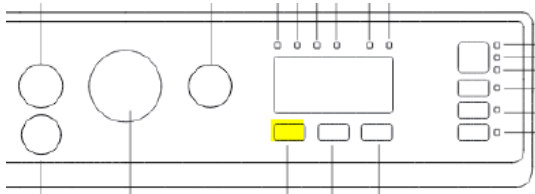 
TABLEAU PROGRAMMES



- | | |
|------------------------------------|---------------------------|
| 1. ON/OFF button | 7. LEVEL OF DRYING button |
| 2. START/PAUSE button and light | 8. TIME OF DRYING button |
| 3. PROGRESSION OF THE CYCLE lights | 9. TEMPERATURE button |
| 4. DOOR LOCKED light | 10. PROGRAMME button |
| 5. OPTIONS button and light | 11. PUSH & GO button |
| 6. DRYING ONLY button and light | |

1. To start the machine press the ON/OFF button .
2. Put your washing and the detergent capsule directly into the machine.
3. Close the door of the machine.
4. Choose a programme and select the desired cycle.

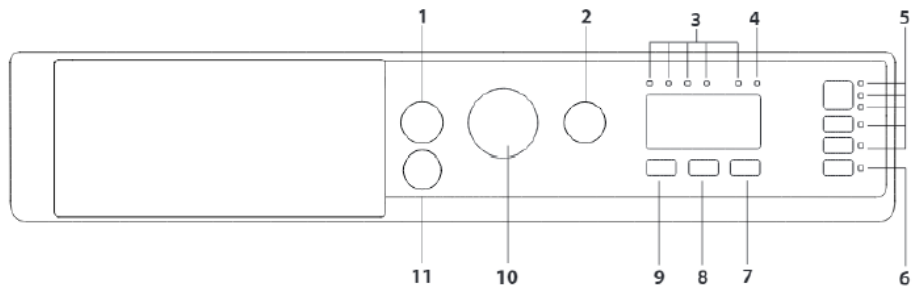A. WASH ONLY


- Using the PROGRAMME button (10) choose the desired type of wash, for example, cotton [coton] or mixed fabrics [mixte]
- Select the desired temperature for the wash using button 9



- Press the START/PAUSE button  The corresponding light lights up, the door locks and the symbol indicating door open turns off
- At the end of the cycle the word END shows on the screen. The door can only be opened once this symbol is lit. Make sure the symbol door open is lit  then open the door and remove the laundry.



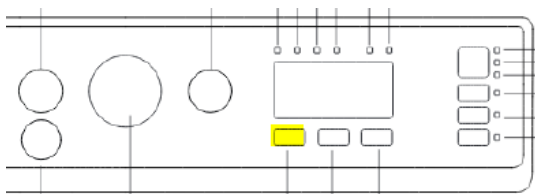


B. WASH + DRY

- Using the PROGRAMME button (10) choose the desired type of wash, for example cotton [coton] or mixed fabrics [mixte]
- Choose the desired temperature for the wash using button 9 (TEMPERATURE)




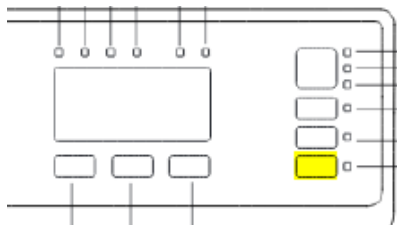
- Choose the length of time for drying using button 8

The following drying levels are available:


- Wardrobe [garde-robe]  : the laundry is completely dry and ready to be put away in the wardrobe without being ironed;
 - Hanger [Cintre]  : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to dry completely;
 - Iron [Repassage]  : clothes are left damp enough to facilitate ironing.
- Press the START/PAUSE [MARCHE/PAUSE] button:  The corresponding light lights up, the door locks and the door open symbol goes out.
 - At the end of the cycle the word END shows on the screen. The door can only be opened once this symbol is lit. Make sure the symbol door open  is lit then open the door and remove the laundry.


 



C. DRY ONLY

- Choose the PROGRAMME button (10) to choose the desired programme, for example cotton [coton] or mixed fabrics [mixte].
- Delete the wash option using the button  on the control panel.

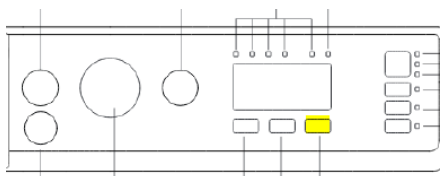

- Select the desired drying time using button 8 on the control panel



- The following drying levels are available:
 - Wardrobe [Garde-robe]  : the laundry is completely dry and can be put away in the wardrobe without being ironed;
 - Hanger [Cintre]  : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to completely dry before being put away;
 - Iron [Repassage]  : clothes are left damp enough to facilitate ironing.
- Press the START/PAUSE [MARCHE/PAUSE] button :  The corresponding light lights up, the door locks and the symbol door open goes out.
- At the end of the cycle **END** shows on the screen. The door can only be opened once this symbol is lit. Make sure the symbol door unlocked  is lit then open the door and remove the laundry.