

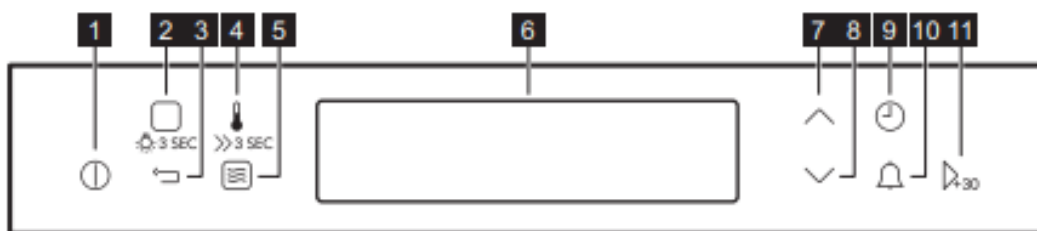
INSTRUCTIONS FOR USE


IKEA KULINARISK 204.168.14 OVEN

The following functions are available :




 



- A. Oven function: see page 2
- B. Microwave function: see page 2

CONTROL PANEL









1. Open the door and put the food/drink on the rotating plate.
2. Close the door.
3. Select a programme.
4. To start the cooking press button 1  START/STOP [MARCHE/ARRÊT]

A. OVEN FUNCTION

- Press button 1 START/STOP  to start the cooking process
- Press on the arrows  and  to select the desired cooking method
- Select Conventional Cooking and press the button  to confirm the setting.
- To set the desired time of cooking press the arrows  and .
- Press button  to start the cooking process.

B. MICROWAVE FUNCTION

- Press  to activate the microwave function.
- Press button . Each time the button  is pressed the time is increased by 30 seconds.
- To set the power level of the microwave press  then press the arrows  and .