 


INSTRUCTIONS FOR USE WASHING/DRYING MACHINE ELECTROLUX EW7W3816BI

The following functions are available on your appliance:

- A. Wash only: see page 2
- B. Wash + dry: see page 3
- C. Dry only: see page 4

CONTROL PANEL

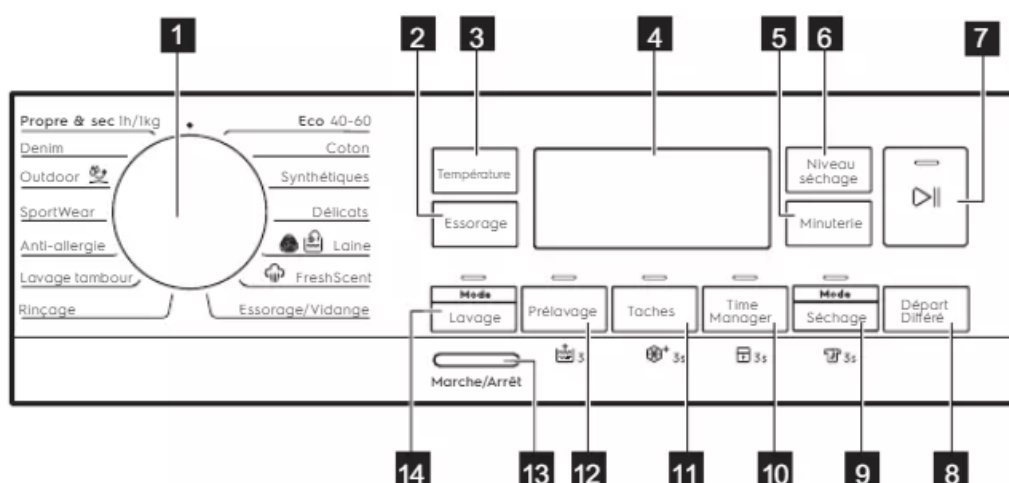

Propre & sec 1h/1kg = Wash & dry 1 hour/1 kg
 Denim = Denim
 Outdoor = Sportswear
 Anti-allergie = Anti-allergic
 Lavage tambour = Washing drum
 Rinçage = Rinse

Eco 40-60 = Economic 40°-60°

- 2. Essorage = Spin
- 3. Température = Temperature
- 5. Minuterie = Timer
- 6. Niveau séchage = Drying level
- 8. Départ différé = Delayed start
- 9. Séchage = Drying

Coton = Cotton

Synthétiques = Synthetics

Déliçats = Gentle cycle

Laine = Wool

FreshScent = Add freshener

Essorage/Vidange = Spin/Drain

10. Time manager

11. Taches = Stains

12. Prélavage = Prewash

 
13. Marche/Arrêt = Start/Stop

14. Lavage = Wash


1. To start the machine press button 13 Start/Stop [Marche /Arrêt].
2. Put your laundry and the detergent capsule directly into the machine.
3. Close the door of the machine.
4. Choose the desired programme and cycle.



A. WASH ONLY

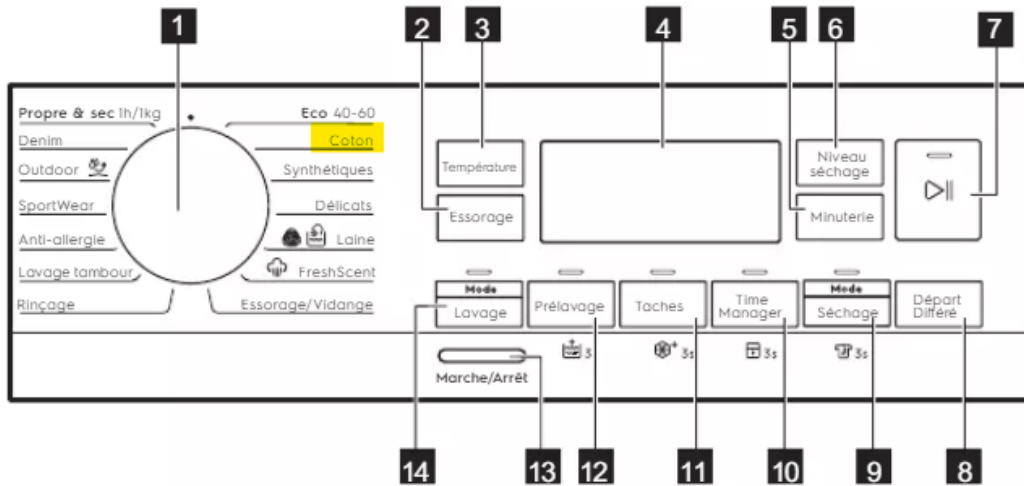

 - Press button 1 to choose the desired type of wash, for example, cotton [coton]

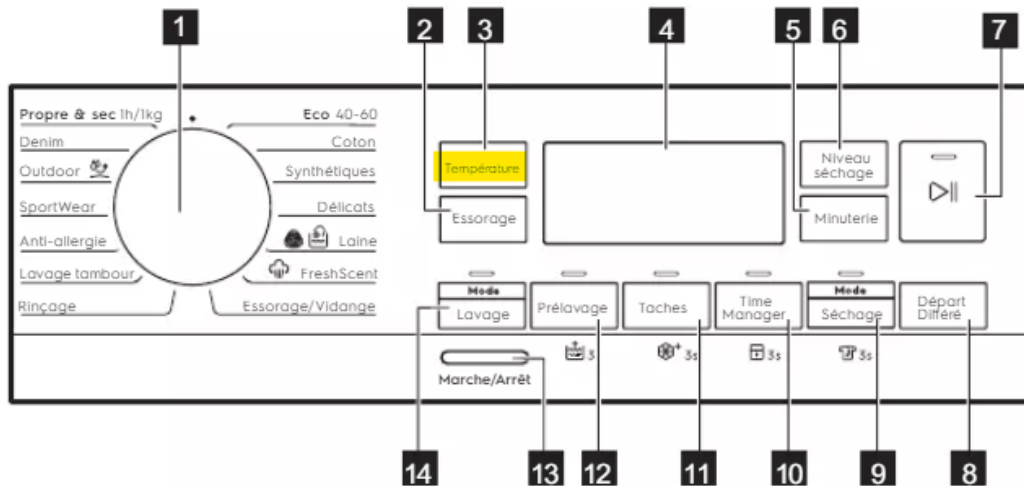

- Using button 3 choose the desired temperature

 


- Press button 7 START/PAUSE [DEPART/PAUSE]  The corresponding light starts flashing, the door locks and the light 'Door locked' shows 

- At the end of the cycle the symbol  shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light  goes out. Open the door and remove the laundry.

B. WASH & DRY

- Using button 1 choose the type of wash, for example, cotton [coton]
- Choose the desired temperature for the wash by using button 3
- Press button 9 Drying [Séchage]

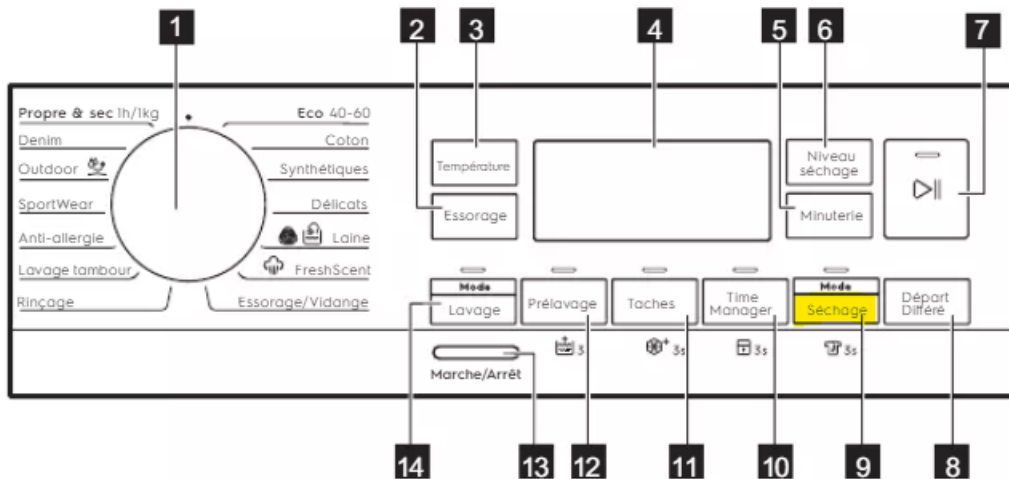

- Select the desired drying level using button 6.

 
The following drying levels are available:

- Completely dry [Très sec] ☀️ : the laundry is completely dry and can be put away in the wardrobe without being ironed;
- Ready to hang [Prêt à ranger] ☀️ : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying;
- Ready to iron [Prêt à repasser] ☀️ : clothes are left damp enough to facilitate ironing.

- Press button 7 :▶️🔒 The corresponding light starts flashing, the door locks and the door locked sign 🔒 shows.
- At the end of the cycle the signal 0:00 shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light 🔒 goes out. Open the door and remove the laundry.

C. DRY ONLY

- Press button 9 Drying [Séchage]
- Deactivate the washing action using button 14 Wash [Lavage] on the control panel

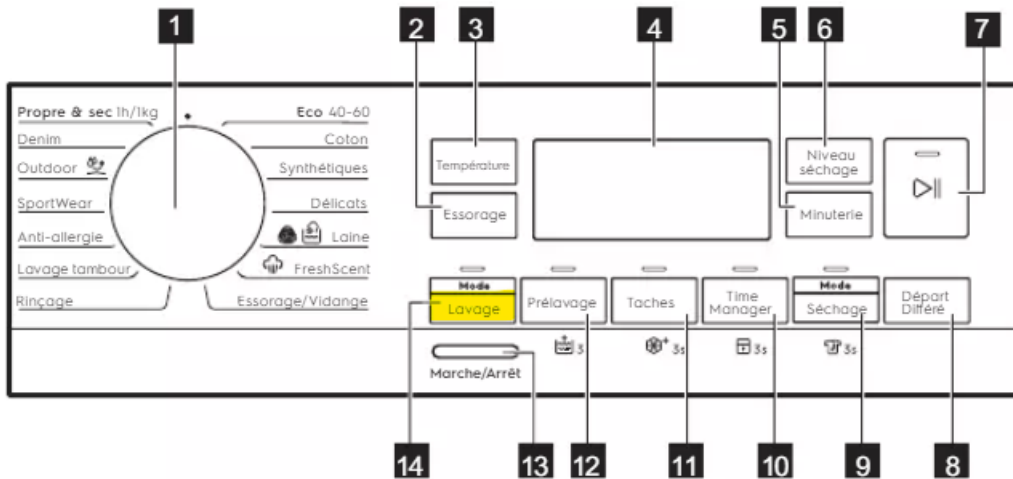

- Choose the desired drying level using button 6

The following drying levels are available:

- Completely dry [Très sec] ☀️ : the laundry is completely dry and can be put away in the wardrobe without being ironed;
- Ready to hang [Prêt à ranger] 🌤️ : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying;
- Ready to iron [Prêt à repasser] 🌞 : clothes are left damp enough to facilitate ironing.

- Press button 7 :▶️ The door will lock, :▶️ the corresponding light will start flashing and the light Door locked [Hublot verrouillé] 🔒 shows.

- At the end of the cycle 000 shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light 🔒 goes out. Open the door and remove the laundry.