

 
INSTRUCTIONS FOR USE

WASHING MACHINE/DRYER LG F954J60WRS

The following functions are available on your appliance:

- A. Wash only: see page 2
- B. Wash + dry: see page 3
- C. Dry only: see page 4

CONTROL PANEL

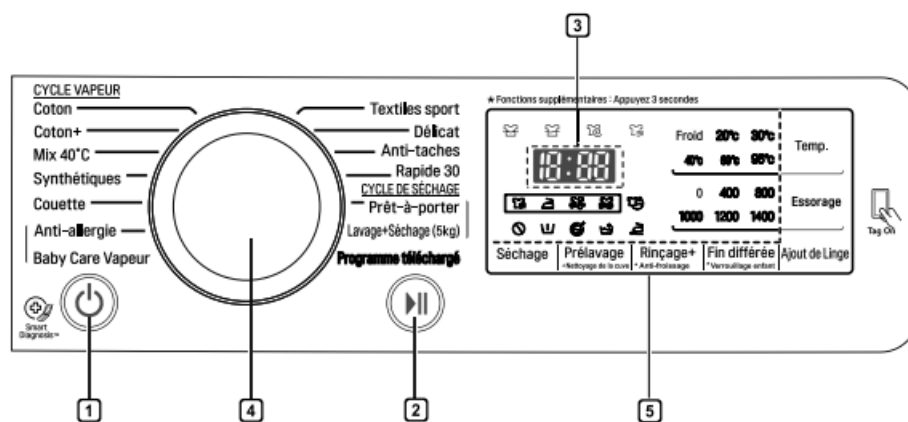

CYCLE VAPEUR = **STEAM CYCLE**

Coton= **Cotton**

Mix 40°C = **Mixed cotton at 40°C**

Synthétiques = **Synthetics**

Couette = **Duvet**

Anti-allergie = **Anti-allergic**

Baby-Care Vapeur = **Baby care steam**

Textiles sport = **Sportswear fabrics**

Délicat = **Delicate fabrics**

Anti-tâches = **Anti-stain**

Rapide 30 = **Quick wash at 30°C**

CYCLE DE SECHAGE = **DRYING CYCLE**

Prêt-à porter = **Ready to wear**

Wash + dry (5 kgs)

Fonctions supplémentaires appuyer 3 secondes = **Additional features: press for 3 seconds**

Séchage = **Drying**

Prélavage = **Prewash**


Rinçage + = **Extra rinse**

Fin différée = **Delayed start**

Temp = **Temperature**

 
Essorage = **Spin**


Ajout du linge = **Add extra laundry**

1. To start the machine press button 1 
2. Put your laundry and the detergent capsule directly into the machine
3. Close the machine door
4. Select a programme and choose the desired cycle

A. WASH ONLY


- Using the programme selection button (button 4) choose the desired washing programme, for example, Cotton [Coton] or Mixed cotton [Mix 40°C] :

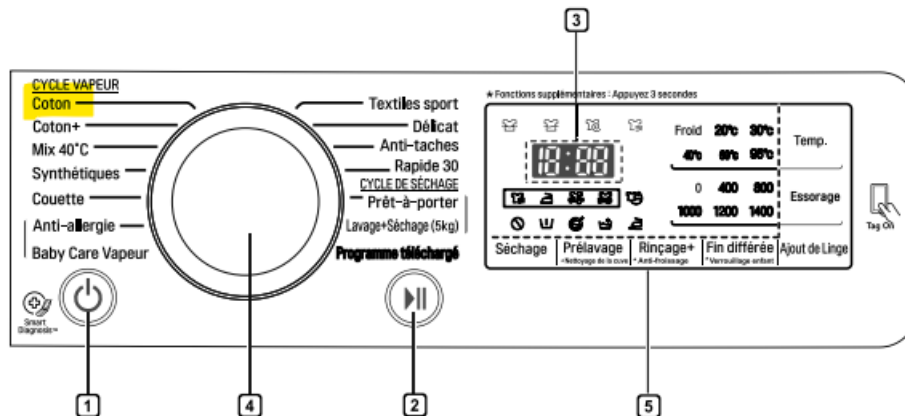

- Press button 1  to start the washing cycle.
- At the end of the cycle a melody sounds and the door can then be opened. Open the machine door and remove the laundry.

B. WASH + DRY

- Using the programme selection button (button 4), choose Wash + Dry [Lavage + Séchage (5kg)]

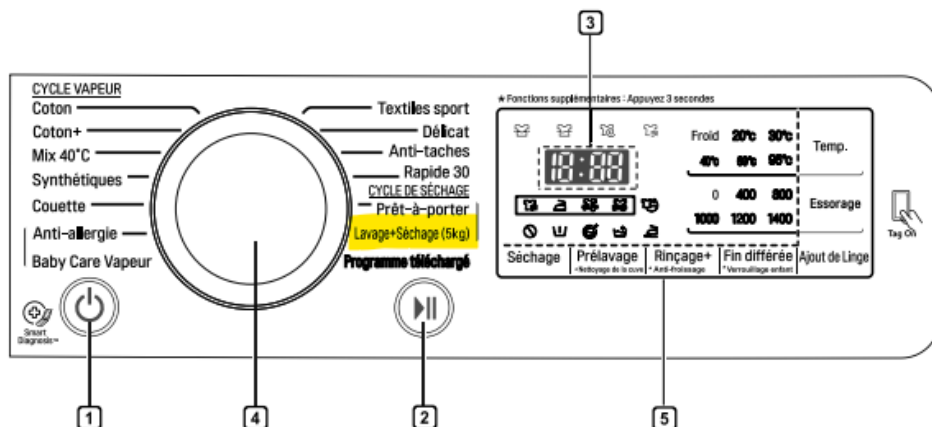


The following drying levels are available:

- Ready to store (Prêt à ranger) (👤) : the laundry is completely dry and can be put away into the wardrobe without being ironed;
- Ready to iron (Normal Eco) (👤) : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying ;
- Ready to iron (Prêt à repasser) (👤) : the clothes are damp enough to facilitate ironing.

- Press button 2 (👤) to start the washing cycle.
- At the end of the cycle a melody sounds and the door can then be opened. Open the machine door and remove the washing.

C. DRY ONLY

- Use the drying [Séchage] button to choose the desired level of drying

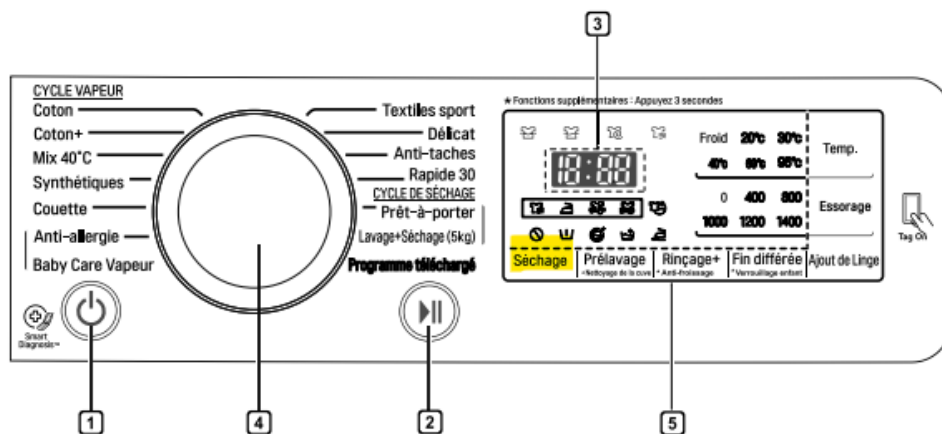

- The following levels of drying are available:

- Ready to store (🗑️) ^{Prêt à ranger} : the laundry is completely dry and can be into the wardrobe without being ironed;
- Ready to iron (🧺) ^{Normal Eco} : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying;
- Ready to iron (🧺) ^{Prêt à repasser} : the clothes are left damp enough to facilitate ironing.

- Press button 2 (▶️) The corresponding indicator lights up, the door locks and the symbol 'door open' goes out.
- At the end of the cycle the word 'END' appears on the screen. The door can only be opened once the symbol lights up. Make sure that the door open symbol is lit then open the door and remove the laundry.