


INSTRUCTIONS FOR USE

IKEA EXEMPLARISK GENAST 60244793 OVEN

The following functions are available

- A. Oven function: see page 2
- B. Microwave function: see page 2

CONTROL PANEL

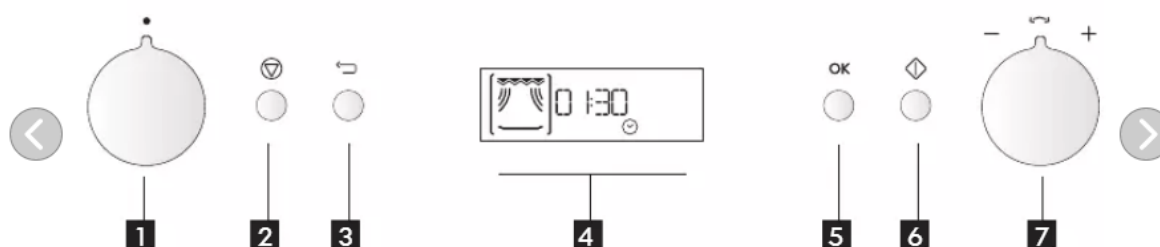

- 1** Bouton Multifonction
- 2** Touche Stop (Arrêt)
- 3** Touche Précédent
- 4** Affichage


- 5** Touche OK
- 6** Touche Start (Démarrage)
- 7** Bouton de réglage

- 1. Multifunction button**
- 2. Stop button**
- 3. Button to go back (previous)**
- 4. Display**
- 5. OK button**
- 6. Start button**
- 7. Settings button**

1. Open the oven and put the food/drink on the rotating plate.

 
2. Close the oven door.

3. Select the desired programme.

4. Start the oven by pressing Start (button 6) 

A. OVEN FUNCTION

- Turn the multifunction button (1) to activate the function Combi
- Turn button 7 to choose the desired temperature.
- Press button OK (5) to confirm your selection.
- Turn button 7 to choose the desired cooking time.
- Press button 6 (Start).



B. MICROWAVE FUNCTION

- Turn the Multifunction button (1) to activate the function microwave
- Turn button 7 to choose the desired temperature.
- Press OK (5) to confirm your selection.
- Turn button 7 to the desired level of power.
- Press the Start button (6) then press it again to increase the length of cooking/heating time desired (by 30 second intervals).

