

 
# INSTRUCTIONS FOR USE WASHING/DRYING MACHINE HOTPOINT BIWDHG861484EU

The following functions are available on your appliance:

- A. Wash only: see page 2
- B. Wash + dry: see page 3
- C. Dry only: see page 4

## CONTROL PANEL


- 1. Touche ON/OFF
- 2. Touche et voyant MARCHÉ/PAUSE
- 3. Voyants AVANCEMENT DU CYCLE
- 4. Voyant HUBLOT VERROUILLÉ
- 5. Touches et voyants OPTION
- 6. Touche et voyant SÉCHAGE SEULEMENT
- 7. Touche SÉCHAGE PAR NIVEAUX
- 8. Touche SÉCHAGE TEMPORISÉ
- 9. Touche TEMPÉRATURE
- 10. BOUTON PROGRAMMES
- 11. Touche PUSH & GO

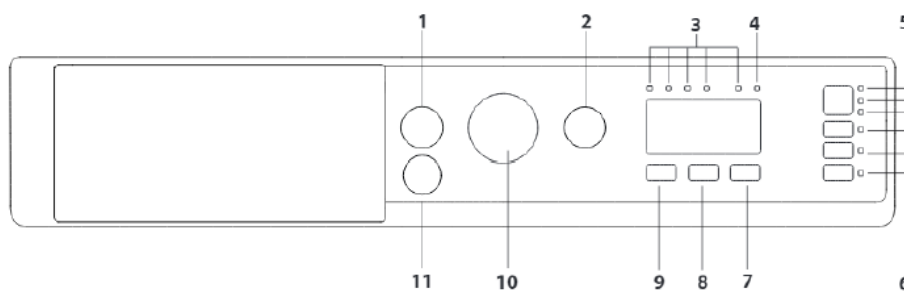

## TABLEAU PROGRAMMES

 
### TABLE OF PROGRAMMES

- 1. ON/OFF button
- 2. START/PAUSE button and light
- 3. Lights showing the PROGRESSION OF THE CYCLE
- 4. Light showing DOOR LOCKED
- 5. Button and light showing OPTIONS
- 6. Button and light for DRY ONLY
- 7. DRYING LEVEL button
- 8. TIMED DRYING button
- 9. TEMPERATURE button
- 10. PROGRAMME BUTTON
- 11. PUSH & GO button

1. To start the machine press .
2. Put the laundry and the detergent capsule directly into the machine.
3. Close the machine door.
4. Select a programme and choose the desired cycle.

## A. WASH ONLY


- Using the programme selection button (button 2) choose the type of wash, for example cotton [coton] or mixed [mixte].
- Select the desired temperature for the wash using button 9 on the control panel

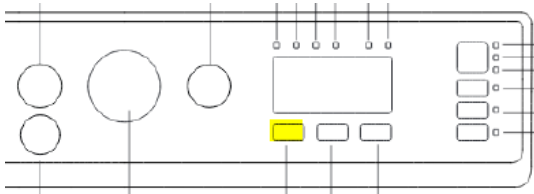

- PRESS THE START/PAUSE [MARCHE/PAUSE] button :▶ The corresponding light comes on, the door locks and the symbol door open goes out.
- At the end of the cycle the word '**END**' shows on the screen. The door can only be opened when the symbol lights up. Make sure the symbol 'door unlocked' is lit then open the door and remove the laundry.



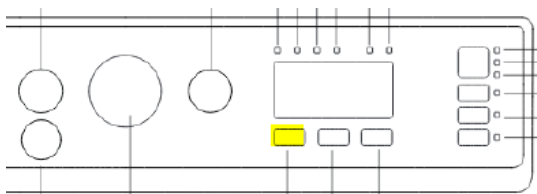

## B. WASH + DRY

- Using the programme selection choose the type of wash, for example, cotton [coton] or mixed fabrics [mixte]
- Select the desired temperature for the wash using button 9 on the control panel.




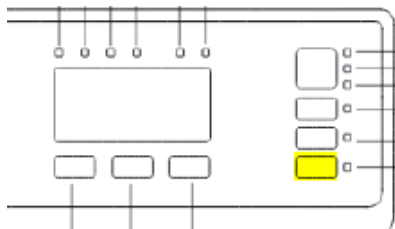
- Select the desired time for drying using button 7 on the control panel

The drying levels available are as follows:


- Wardrobe [Garde-robe]  : the laundry is completely dry and ready to be put away in the wardrobe without being ironed;
  - Hanger [Cintre]  : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying;
  - Iron [Repassage]  : clothes are left damp enough to facilitate ironing.
- Press the START/PAUSE [MARCHE/PAUSE] button  The light comes on, the machine door locks and the symbol indicating that the door is open goes out.
  - At the end of the cycle the word '**END**' appears on the screen. The door can only be opened when this symbol lights up. Make sure that the symbol 'door open' is lit then open the door and remove the laundry.





### C. DRY ONLY

- Select the desired programme, for example cotton [coton] or mixed fabrics [mixte].
- Delete the wash option using the button  on the control panel.

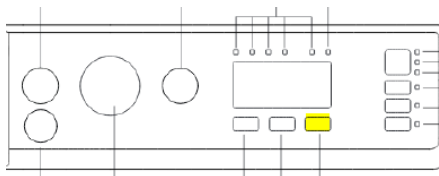

- Select the desired drying time using key 7 on the control panel



- The following levels of drying are available:
  - Wardrobe [Garde-robe]  : the laundry is completely dry and can be put away in the wardrobe without being ironed;
  - Hanger [Cintre]  : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to dry completely;
  - Iron [Repassage]  : the clothes are left damp enough to facilitate ironing.
- Press the START/PAUSE [MARCHE/PAUSE] button  . The corresponding light is lit, the door locks and the symbol 'door open' goes out.
- At the end of the cycle the word 'END' appears on the screen. The door can only be opened when the symbol is lit. Make sure that the symbol 'door open' is lit and remove the laundry.