 


INSTRUCTIONS FOR USE OF WASHING MACHINE/DRYER ELECTROLUX EWW1694SWG


The following functions are available on your appliance:

- A. Wash only: see page 2
- B. Wash and dry: see page 3
- C. Drying only: see page 4

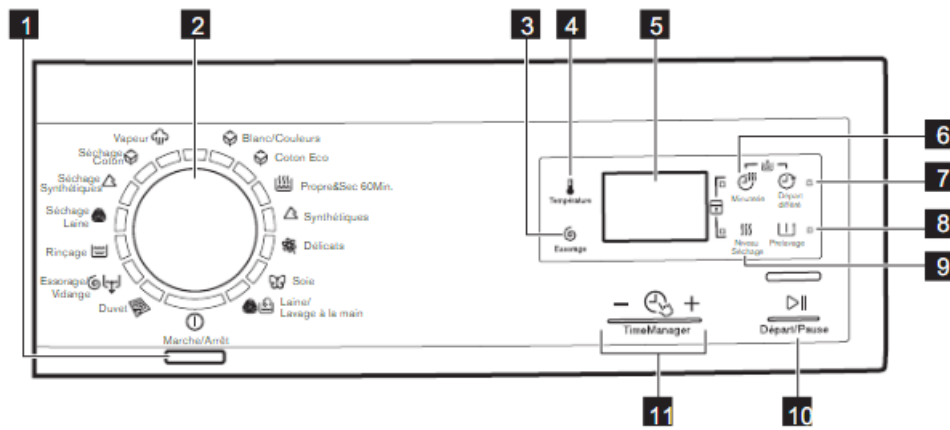

 
- 1. Marche Arrêt = Start/Stop
- 2 = Programme button
- Vapeur = Steam
- Séchage coton = Drying cotton
- Séchage synthétiques = Drying synthetics
- Séchage laine = Drying wool
- Rinçage = Rinse
- 3. Essorage = Spin
- Vidange = Draining
- Duvet = duvet/quilt
- Blanc/couleurs = White/coloureds
- Coton Eco = Cotton economical wash





- Propre&Sec 60 min = Wash & dry 60 minutes
- Synthétiques = Synthetic fabrics
- Délicat = Fragile
- Soie = Silk
- Laine/Lavage à la main = Wool/handwash
- 4. Température = Temperature
- 6 = Minuterie = Timer
- 7. Départ différé = Delayed start
- 8. Prélavage = Prewash
- 9. Niveau séchage = Drying level
- 10. Départ/Pause = Start/Pause

1. To start the appliance press Start/Stop [Marche/ Arrêt] (button 1) 
2. Put your laundry and the detergent capsule directly into the machine.
3. Close the door of the appliance.
4. Select a programme and choose the desired cycle.

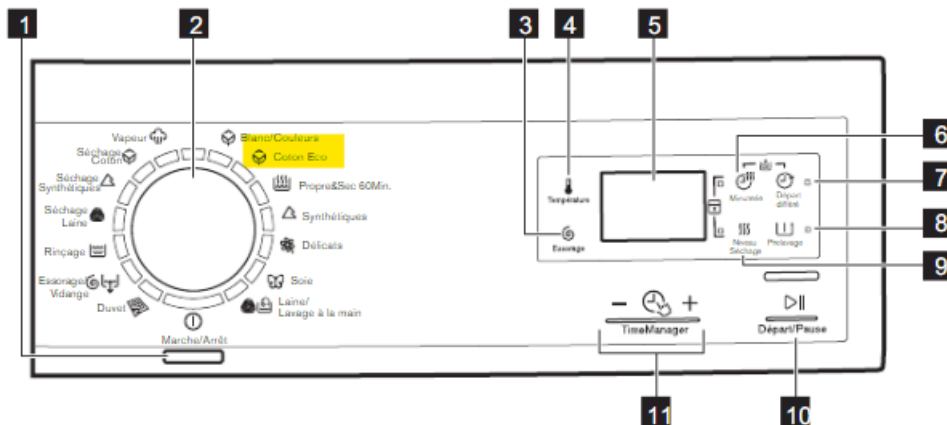
A. WASH ONLY


- Using the Programme button (2) select the desired programme, such as Cotton economical wash [Coton Eco]







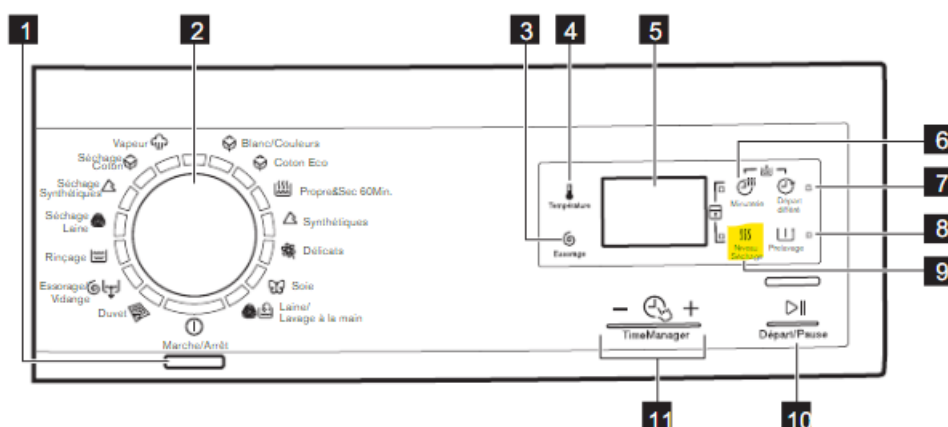

- Using key 4, select the desired temperature for the wash.
- Switch on by pressing the Start/Pause [Départ/Pause] button (10).  The indicator stops flashing and remains steady. The indicator light  flashes in the display and the programme starts.
- At the end of the cycle a signal sounds and the symbol  appears on the screen. The light  goes out indicating that the door can be opened. Open the door and remove the laundry.

B. WASH + DRY

- Start the machine by pressing the START/STOP [MARCHE/ARRÊT] button (1) for a few seconds.
- Press  (Key 9) several times until one of the drying degree indicators lights up.




The following drying levels are available :




- o Extra dry  : the laundry is completely dry and can be put into the wardrobe without being ironed;
 - o Ready to hang  : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying;
 - o Ready to iron  : clothes are left damp enough to facilitate ironing.
- Press Start/pause [Départ/pause] (Key 10)  to start the programme.
 - At the end of the cycle, a signal sounds and the symbol  appears on the display. The light  goes out to indicate that the door can be opened. Open the door and remove the laundry.

C. DRYING ONLY

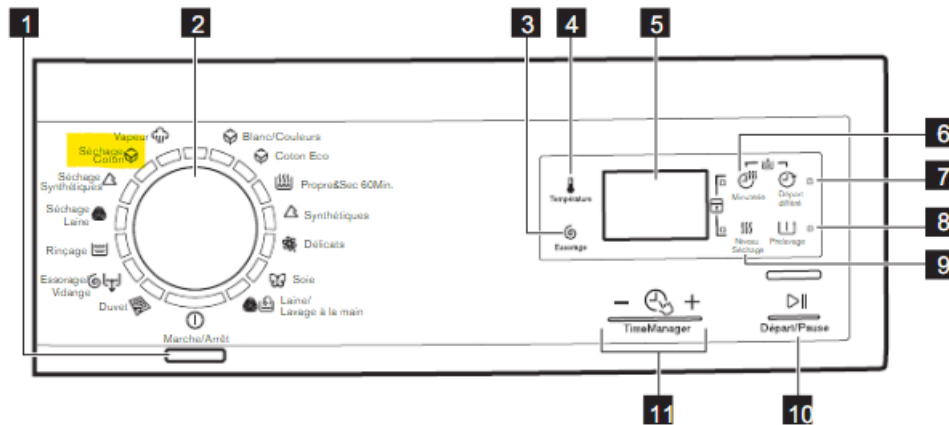- Switch on by pressing the START/STOP [MARCHE/ARRÊT] (button 1) for a few seconds.
- Using the Programme button (2) select the desired programme, for example, Drying cotton [Séchage Coton]



The following drying levels are available:

- Extra dry ☀️ : the laundry is completely dry and can be put in the wardrobe without being ironed;
 - Ready to hang 🌤️ : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying.
 - Ready to iron 🌥️ : the clothes are left damp enough to facilitate ironing.
- Press Start/pause [Départ/Pause] button (10)  to start the programme.
 - At the end of the cycle a signal sounds and the symbol  shows on the display. The light  goes out to indicate that the door can be opened. Open the door and remove the laundry.