

INSTRUCTIONS FOR USE

IKEA SMAKSAK 204.117.60 OVEN

The following functions are available

- A. Oven function: see page 2
- B. Microwave function: see page 3
- C. Child security function: see page 3

CONTROL PANEL

Touches

Touche sensitive	Fonction	Description
	OPTIONS	Pour régler les fonctions de l'horloge, la puissance des micro-ondes. Pour vérifier la température du four. Utilisez-la uniquement lorsqu'un mode de cuisson est en cours.
	DÉPART + 30 s.	Pour activer un mode de cuisson. Appuyez sur cette touche pour rallonger la durée de la fonction Micro-ondes de 30 secondes.
	OK	Pour confirmer.

Affichage



- A. Minuteur / Température / Puissance des micro-ondes
- B. Voyant de chauffe et de chaleur résiduelle
- C. Mode Micro-ondes
- D. Sonde à viande (sur certains modèles uniquement)
- E. Verrouillage de la porte (sur certains modèles uniquement)
- F. Heures/minutes
- G. Mode Démo (certains modèles uniquement)
- H. Fonctions de l'horloge

Sensitive button

Functions


Description

Sensitive button/OPTIONS: To adjust the clock and power functions, to verify the oven temperature.

Only use when a cooking mode is in progress

DÉPART + 30 s/ To activate a cooking mode. Press this button to extend the duration of the microwave function by 30 seconds.

- A. Timer/Temperature/Microwave power
- B. Heating and residual heat indicator
- C. Microwave mode
- D. Meat sensor (on certain models only)
- E. Door lock (on certain models only)
- F. Hours/minutes
- G. Demonstration mode (on certain models only)
- H. Clock/timer functions

1. Open the oven door and put the food/drink on the rotating plate.
2. Close the oven door
3. Select a programme
4. Press  to start the oven



 
A. OVEN FUNCTION

- Turn the cooking mode button  to activate the conventional cooking mode




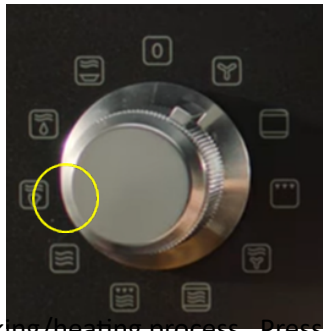
- Turn the temperature button to select the desired temperature.




- Press  to start the oven.
- Press  so that the light flashes . Then select the desired cooking time using the Command button. Press OK to confirm.



B. MICROWAVE FUNCTON

- Turn button C to microwave 



- Press  to start the cooking/heating process. Press it again to prolong the time in 30 second intervals.

D. CHILD SECURITY FUNCTION

- To activate or deactivate the child security function (E) , press simultaneously on  and OK for 2 seconds.