

INSTRUCTIONS FOR USE

CANDY MIC 440 TX OVEN

The following functions are available

- A. Oven: see page 2
- B. Microwave: see page 2

CONTROL PANEL



2. select a programme.





- 1) Manettes des fonctions
- 2) Bouton de Puissance/Poid
- 3) Bouton de préchauffage rapide
- 4) Bouton On/Off
- 5) Bouton de Temperature/Automenu
- 6) Bouton de l'heure
- 7) Bouton Start/Pause
- 8) Manette de sélection

- 1. **Function controls**
- 2. **Power/weight button**
- 3. **Quick pre-heat button**
- 4. **On/off button**




- 5. **Temperature/automenue button**
- 6. **Timer button**
- 7. **Start/pause button**
- 8. **Selection button**

- 1. Open the oven and put the food/drink on the rotating plate.
- 2. Close the door.
- 3. Select a programme.
- 4. To start the oven press the ON/OFF button (4).

A. OVEN FUNCTION

- To start the oven press  (button 4)
- Turn button 1 to select the desired type of cooking 'Double cooking grid' 
- Press Timer button (6)  and turn the selection knob to the desired time for cooking duration
- Press button 7  to start the cooking process.

B. MICROWAVE FUNCTION

- Press button 4  to start the microwave
-
- Press the Power/weight button  (2) and turn the Selection button (8) to adjust the power.
- Press button 7  to start the cooking process.