

Bosch Oven HBG672B.2 — Simplified Manual

1. Turning on the oven

- Press the On/Off button (■).
- The menu will appear on the display.

2. Selecting a cooking mode

- Turn the central selector to choose a mode:
 - 3D Hot Air (recommended)
 - Convection Bake
 - Grill
 - Top & Bottom Heat
- Press to confirm.

3. Setting the temperature

- Turn the selector to adjust the temperature.
- Press to confirm.
- The oven will start preheating.

4. Preheating

- A preheating symbol will appear until the target temperature is reached.

5. Setting a timer

- Press the Timer button (■).

- Select the desired duration → Press to confirm.
- The oven will turn off automatically once the time is over.

6. Turning off the oven

- Press the On/Off button (■).
- Leave the door slightly open to help cooling.

7. Pyrolytic cleaning

- Remove all trays and accessories.
- Select Pyrolytic Cleaning (Eco / Normal / Intensive).
- The door will lock automatically during the cycle.

8. Tips

- 3D Hot Air = faster and more even cooking.
- Use rack level 2 or 3 for most dishes.
- Do not use abrasive cleaners inside the oven.