


INSTRUCTIONS FOR USE

IKEA RAFFINERAD 303.009.45 OVEN

The following functions are available:

- A. Oven function: see page 2
- B. Microwave function: see page 2

CONTROL PANEL

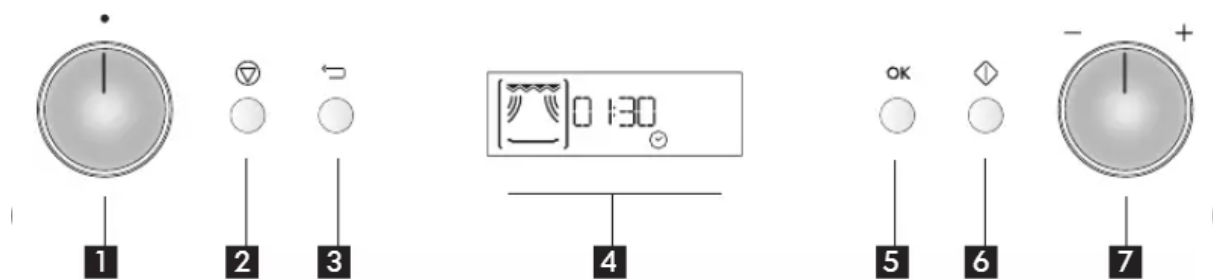


- 1** Bouton multifonction "push-push"
- 2** Touche Stop (Arrêt)
- 3** Touche Précédent
- 4** Affichage


- 5** Touche de confirmation (OK)
- 6** Touche Start (Démarrage)
- 7** Bouton de réglage "push-push"

- 1. Push-push multifunction button**
- 2. Stop button**
- 3. Previous/go back button**
- 4. Display**
- 5. OK/Confirm button**

 
- 6. Start button**
- 7. Push-push control button**

1. Open the oven and put the food/drink on the rotating plate.
2. Close the door.
3. Select a programme.
4. Start the cooking process by pressing button 6 (Start) 

A. OVEN FUNCTION

- Turn the multifunction button (1) to Combi 
- Turn the control button (7) to select the desired temperature.
- Press button OK (5) to confirm your selection.
- Turn button 7 to the desired cooking time.
- Press Start (6).

B. MICROWAVE FUNCTION

- Turn the multifunction button (1) to activate the microwave function 
- Turn the control button (7) to the desired temperature.
- Press OK (button 5) to confirm your selection.
- Turn the control button (7) to the desired power of the microwave.
- Press Start (button 6). Press Start again to increase the length of time in 30-second steps.